



Alienware 17 R3 Display Replacement

Replace the display in Alienware 17 R3 laptop.

Written By: Jonathon Tschurwald



INTRODUCTION

This guide will show you how to replace the display for your Alienware 17 R3 laptop. Ensure you have all the necessary tools before starting.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
-

Step 1 — Display



- Turn the computer off.
- Disconnect the charging cable from the computer.
- ⚠ Failure to unplug the charging cable could result in damaging the computer or seriously injuring yourself.
- Flip the computer upside down.
- ⓘ Wear the anti-static wrist strap to prevent any electrical shock to the components. Shocks may damage the components.

Step 2



- Unscrew and remove the two 4mm Phillips screws from cover.

Step 3



- Pull up and slide cover off.

Step 4



- Unplug the black wire with the yellow tag to disconnect the battery.

Step 5



- Using the plastic opening tool, pull display casing away from main body.

Step 6



- Unscrew and remove the two 2mm Phillips screws from the bottom of the display.

Step 7



- Disconnect plugs connecting the display to the main body.

Step 8



- Lift display out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 02:38:39 PM.